
FCAG-A

Location of nameplate

- The unit nameplate is located on the control tox cover. The decoration panel namelable is located on the piping-algo panel frame, under the corner cover. 2. When installing optional accessories, refer to their respective documentation. 3. May are the didatmore between the celling and the casatetie does not exceed 30mm.
- The maximum celling opening is \$10mm.
 The maximum celling opening is \$10mm.
 When the conditions in the celling content of the presentine and 80% relative humidity, or when fresh all is inducted into the celling, additional insudation is required (polyethylene foam, thickness 210mm).
 When installing a server kit mere will be a receiver on this location. For details, see the drawing of the writekes controller.
 When installing a writekes controller, there will be a receiver on this location. For details, see the drawing of the writekes controller.

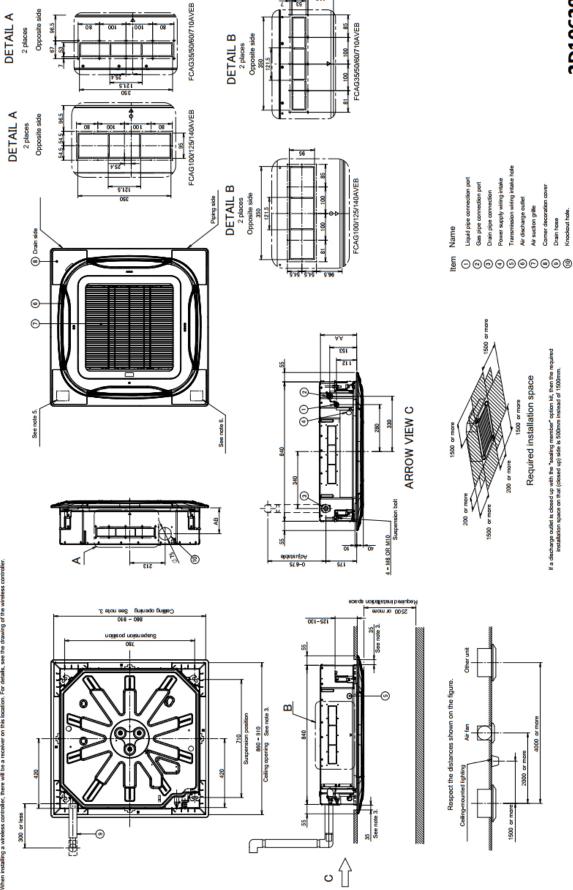

19

DIMENSIONAL DRAWINGS

winng intake hole

Air discharge outlet Corner decoration Air suction grille

ckout hole Drain hose

If a discharge outlet is closed up with the "sealing member" option isit, then the required installation space on that (closed up) side is 500mm instead of 1500mm.

Required installation space

4000

2000 or more

1500 or more

200 or n

2D106292