


7 Dimensional drawings

7 - 1 Dimensional Drawings with Accessories

FXFQ-B

Notes


1. Location of nameplate
The unit nameplate is located on the control box cover.
The decoration panel nameplate is located on the piping side panel frame, under the corner cover.
2. When installing optional accessories, refer to their respective documentation.
3. Make sure the distance between the ceiling and the cassette does not exceed 35-mm.
The maximum ceiling opening is 910-mm.
4. When the conditions in the ceiling exceed 30°C ambient temperature and 80% relative humidity, or when fresh air is inducted into the ceiling, additional insulation is required (polyethylene foam, thickness ≥10-mm).
5. When installing a sensor kit, there will be a sensor on this location. For details, see the drawing of the sensor kit.
6. When installing a wireless controller, there will be a receiver on this location. For details, see the drawing of the wireless controller.

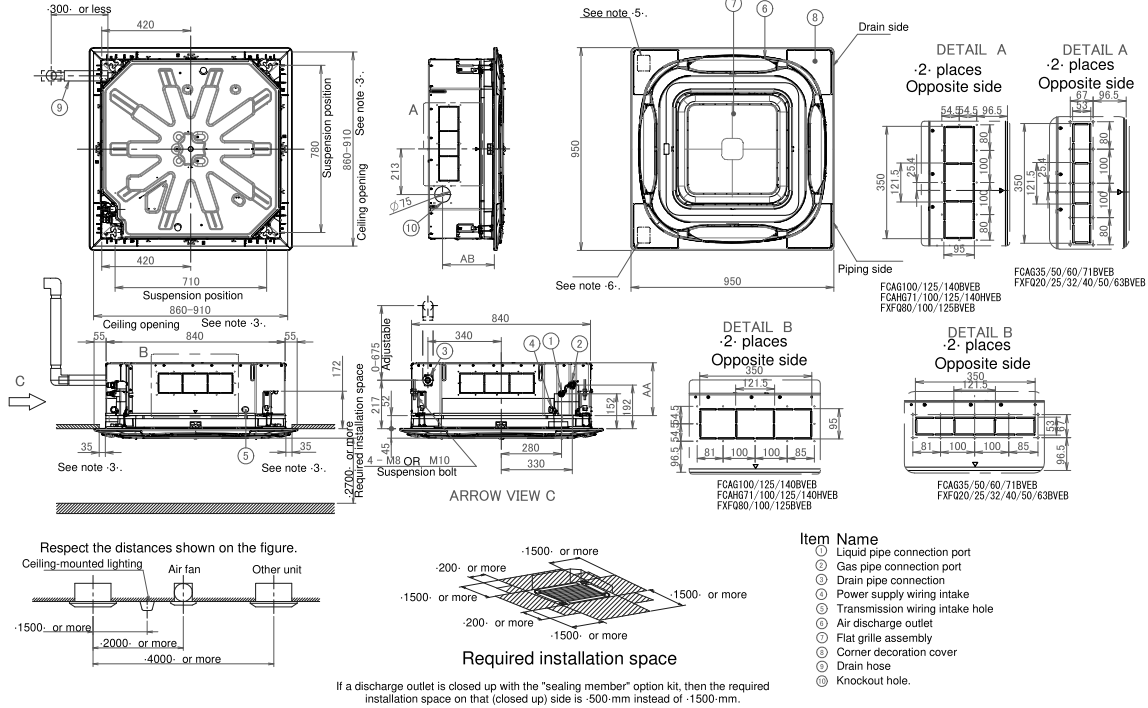

2D121703


FXFQ-B

Remote control dimensions

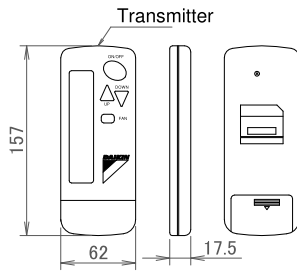


Remote control holder

Installation methods
Installation to wall surface

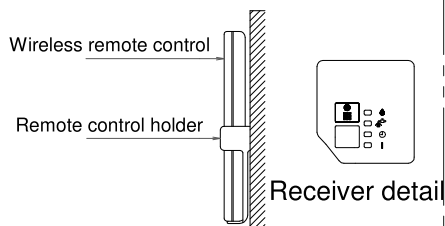

Installation methods

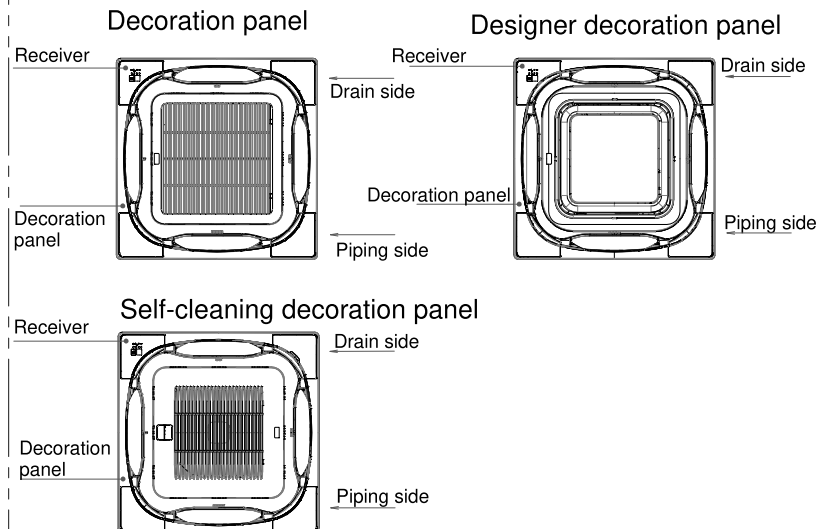

Front panel	Model name	Option
Decoration panel	BYCQ140E2W1(W)	BRC7FA532F
Self-cleaning decoration panel	BYCQ140E2GFW1	BRC7FA532FB
Designer decoration panel	BYCQ140E2P	BRC7FB532F
	BYCQ140E2PB	BRC7FB532FB


3D121750

7 Dimensional drawings

7 - 1 Dimensional Drawings with Accessories

FXFQ-B

Installation methods

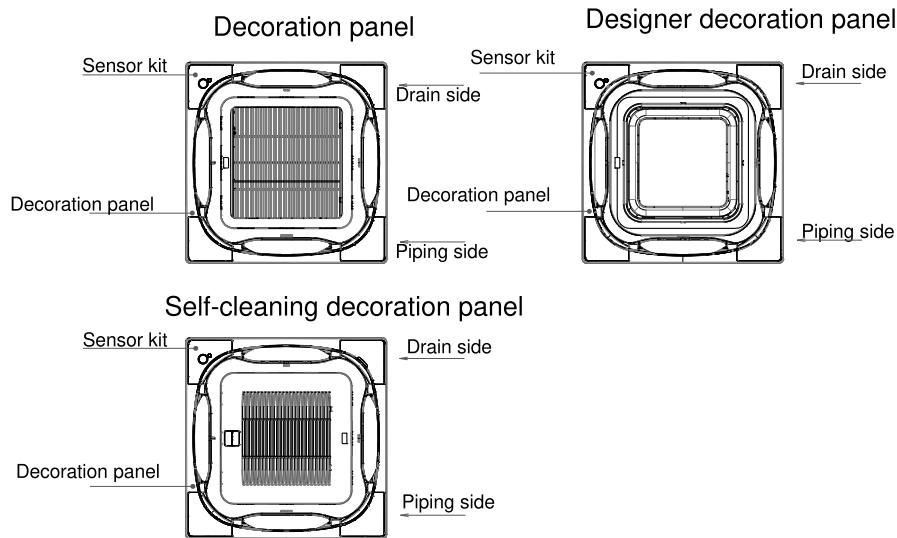

Front panel	Model name	Option
Decoration panel	BYCQ140E2W1(W)	BRYQ140B8
	BYCQ140E2W1B	BRYQ140B8B
Self-cleaning decoration panel	BYCQ140E2GFW1	BRYQ140B8
	BYCQ140E2GFW1B	BRYQ140B8B
Designer decoration panel	BYCQ140E2P	BRYQ140C8
	BYCQ140E2PB	BRYQ140C8B

3D121755