


9 Wiring diagrams

9 - 1 Wiring Diagrams - Single Phase

FXHQ-A

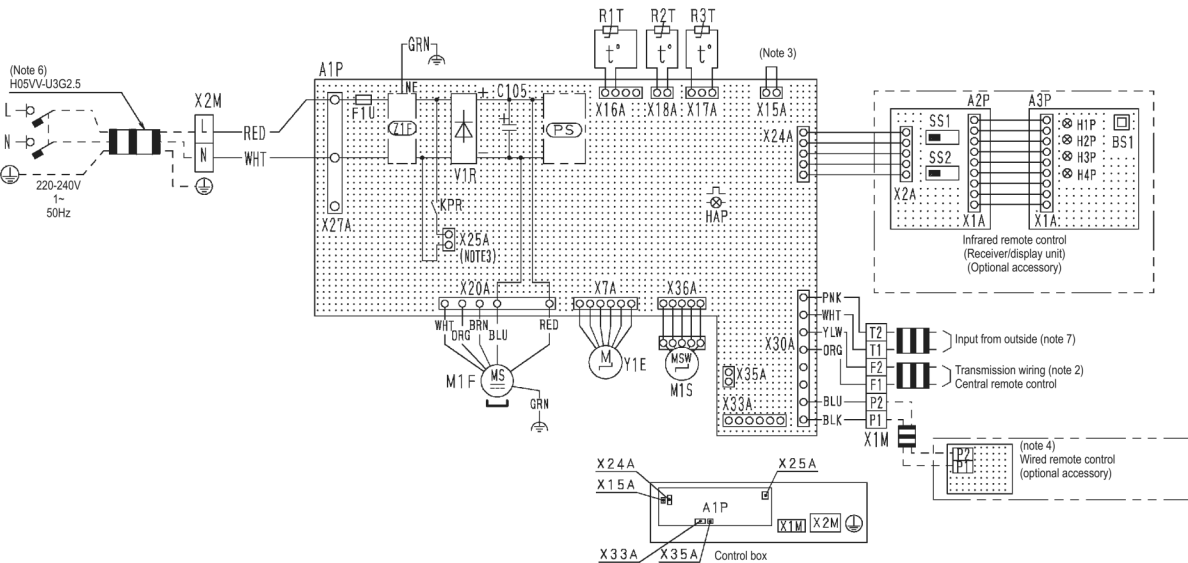

NOTES

- : terminal block, : connector, : field wiring
: short circuit connector
- In case using central remote control, connect it to the unit in accordance with the attached installation manual.
- X15A, X25A are connected when the drain up kit is being used.
In accordance with the attached installation manual.
- In case of main/sub changeover, see the installation manual attached to remote control.
- Symbols show as follows: BLK: BLACK, RED: RED, BLU: BLUE, WHT: WHITE, YLW: YELLOW, GRN: GREEN, ORG: ORANGE, BRN: BROWN.
- Shows only in case of protected piping. Use H07RN-F in case of no protection.
- When connecting the input wires from outside, forced OFF or ON/OFF control operation can be selected by the remote control. See installation manual for more details.

3D079560C