
10 Wiring diagrams

10 - 1 Wiring Diagrams - Single Phase

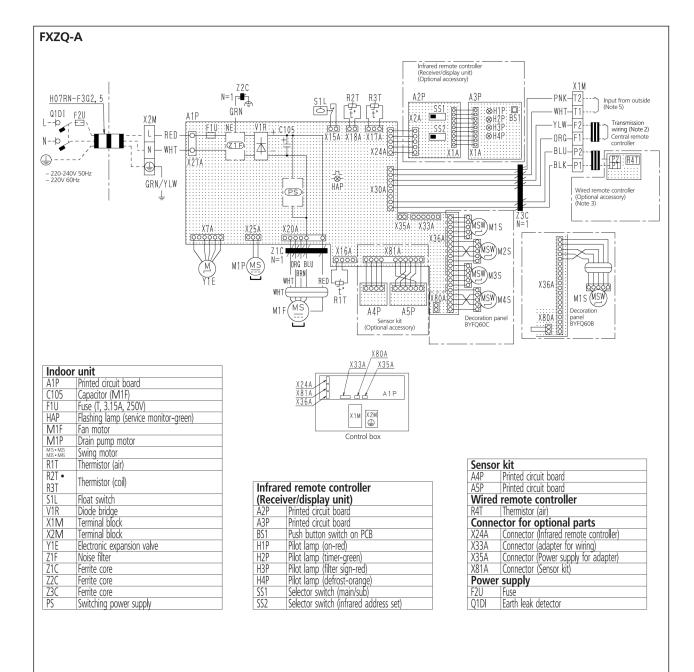

Notes

- 1. □ : Terminal block, □ : Connector, □ : Field wiring
- 2. In case of using central remote controller, connect it to the unit in accordance with the attached installation manual.
- 3. In case of main/sub changeover, see the installation manual attached to remote controller.
- 4. Symbols show as follows: BLK:Black RED:Red BLU:Blue WHT:White YLW:Yellow GRN:Green ORG:Orange BRN:Brown PNK:Pink.
- 5. When connecting the input wiring from outside, forced off or on/off control operation can be selected by the remote controller See installation manual for more details.

3D081396A