


# 9 Wiring diagrams

## 9 - 3 Wiring Diagrams - Three Phase

RXYQ14-20U  
RYYQ14-20U  
RYMQ14-20U

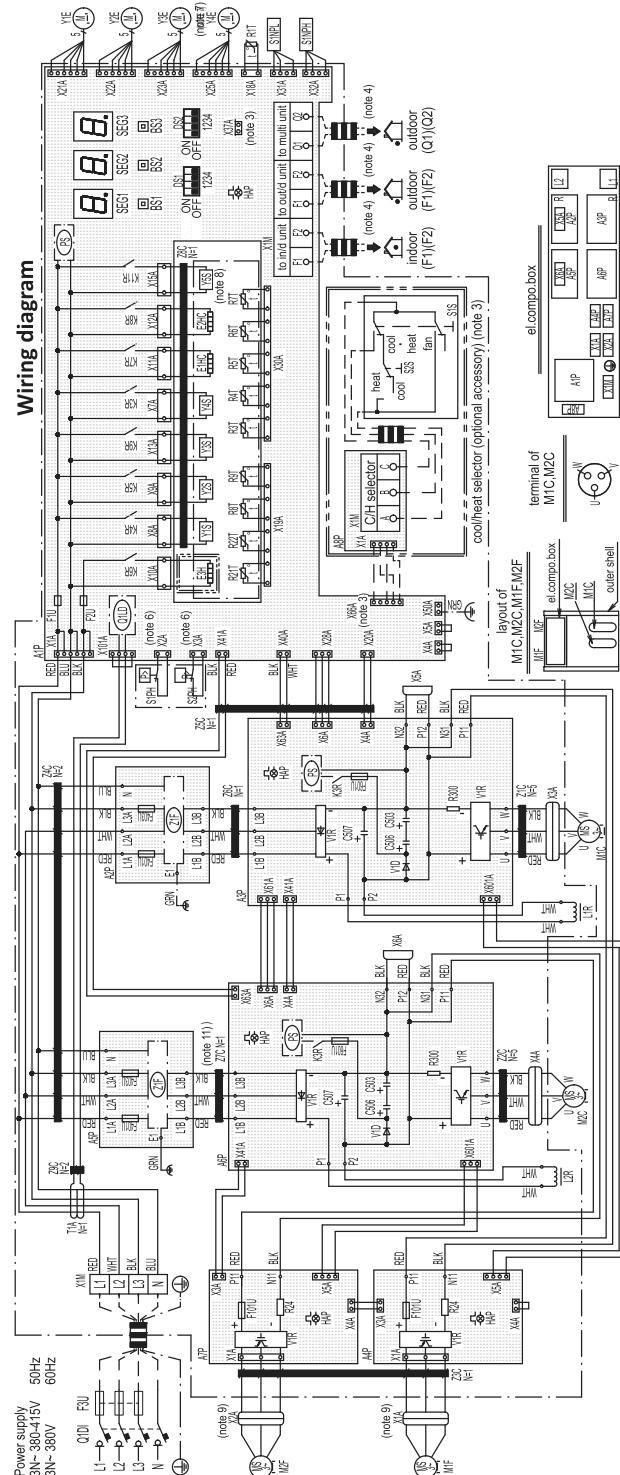

A1P	Printed circuit board (main)
A2P, A5P	Printed circuit board (noise filter)
A3P, A6P	Printed circuit board (inv)
A4P, A7P	Printed circuit board (fan)
A8P	Printed circuit board (ABC I/P)
BS1~3 (A1P)	Push button switch (mode, set, return)
C503, C506, C507 (A3P, A6P)	Capacitor
DS1, DS2 (A1P)	Dip switch S1PH,
E1HC, E2HC	Crankcase heater
E3H	Drainpan heater (option)
F1U, F2U (A1P)	Fuse (T, 3, 15A, 250V)
F3U	Field fuse
F101U (A4P, A7P)	Fuse
F401U, F403U (A2P, A5P)	Fuse
F601U (A3P, A6P)	Fuse
HAP (A1P, A3P, A4P, A6P, A7P)	Pilotlamp (service monitor-green)
K3R (A3P, A6P)	Magnetic relay
K3R (A1P)	Magnetic relay (Y4S)
K4R (A1P)	Magnetic relay (Y1S)
K5R (A1P)	Magnetic relay (Y2S)
K6R (A1P)	Magnetic relay (E3H)
K7R (A1P)	Magnetic relay (E1HC)
K8R (A1P)	Magnetic relay (E2HC)
K9R (A1P)	Magnetic relay (Y3S)
K11R (A1P)	Magnetic relay (Y5S)
L1R, L2R	Reactor
M1C, M2C	Motor (compressor)
M1F, M2F	Motor (fan)
PS (A1P, A3P, A6P)	Switching power supply
Q1DI	Field earth leakage breaker
Q1LD (A1P)	Field earth current detector
R24 (A4P, A7P)	Resistor (current sensor)
R300 (A3P, A6P)	Resistor (current sensor)
R1T	Thermistor (air)
R3T	Thermistor (accumulator)
R4T	Thermistor (heat exc, liq, pipe)
R5T	Thermistor (subcool, liq, pipe)
R6T	Thermistor (heat exc, gas pipe)
R7T	Thermistor (heat exc, deicer)
R8T, R9T	Thermistor (M1C, M2C body)
R21T, R22T	Thermistor (M1C, M2C discharge)
S1NPH	Pressure sensor (high)
S1NPL	Pressure sensor (low)
S1PH, S2PH	Pressure switch (disch)
SEG1~SEG3 (A1P)	7-segment display
T1A	Current sensor
V1D (A3P, A6P)	Diode
V1R (A3P, A4P, A6P, A7P)	Power module
X'A	Connector
X1M (A1P)	Terminal block (control)
X1M (A8P)	Terminal block (power supply)
Y1E	Electronic expansion valve (main)
Y2E	Electronic expansion valve (injection)
Y3E	Electronic expansion valve (refrigerant jacket)
Y4E	Electronic expansion valve (storage vessel (note 7)
Y1S	Solenoid valve (main)
Y2S	Solenoid valve (accumulator oil return)
Y3S	Solenoid valve (oil1)
Y4S	Solenoid valve (oil2)
Y5S	Solenoid valve (sub) (note 8)
Z'C	Noise filter (ferrite core)
Z'F (A2P, A5P)	Noise filter (with surge absorber)
Connector for optional accessories	
X10A	Connector (drainpan heater)
X37A	Connector (power adapter)
X66A	Connector (remote switching)
	Cool/heat selector

### NOTES

- This wiring diagram applies only to the outdoor unit.
- Field wiring, terminal block, connector, terminal,
  - protective earth (screw), functional earth, earth wiring,
  - field supply, pcb, switch box, option
- When using the optional adapter, refer to the installation manual of the optional adapter.
- For connection wiring to indoor-outdoor transmission F1-F2, outdoor-outdoor transmission F1-F2, outdoor-multi transmission Q1-Q2, refer to the installation manual.
- How to use BS1~3 switch. Refer to "service precaution" label on el. Compo. Box cover.
- When operating, don't shortcircuit the protection devices (S1PH, S2PH)
- Only for RYYQ model.
- Only for RYYQ/RYYMQ model.
- Connector X1A (M1F) is red, connector X2A (M2F) is white.
- Colors: BLK:black, RED:red, BLU:blue, WHT:white, GRN:green.
- Only for 14, 16 class

2D117536C