



## 6 Dimensional drawings

### 6 - 1 Dimensional Drawings

RQCEQ712-848P3

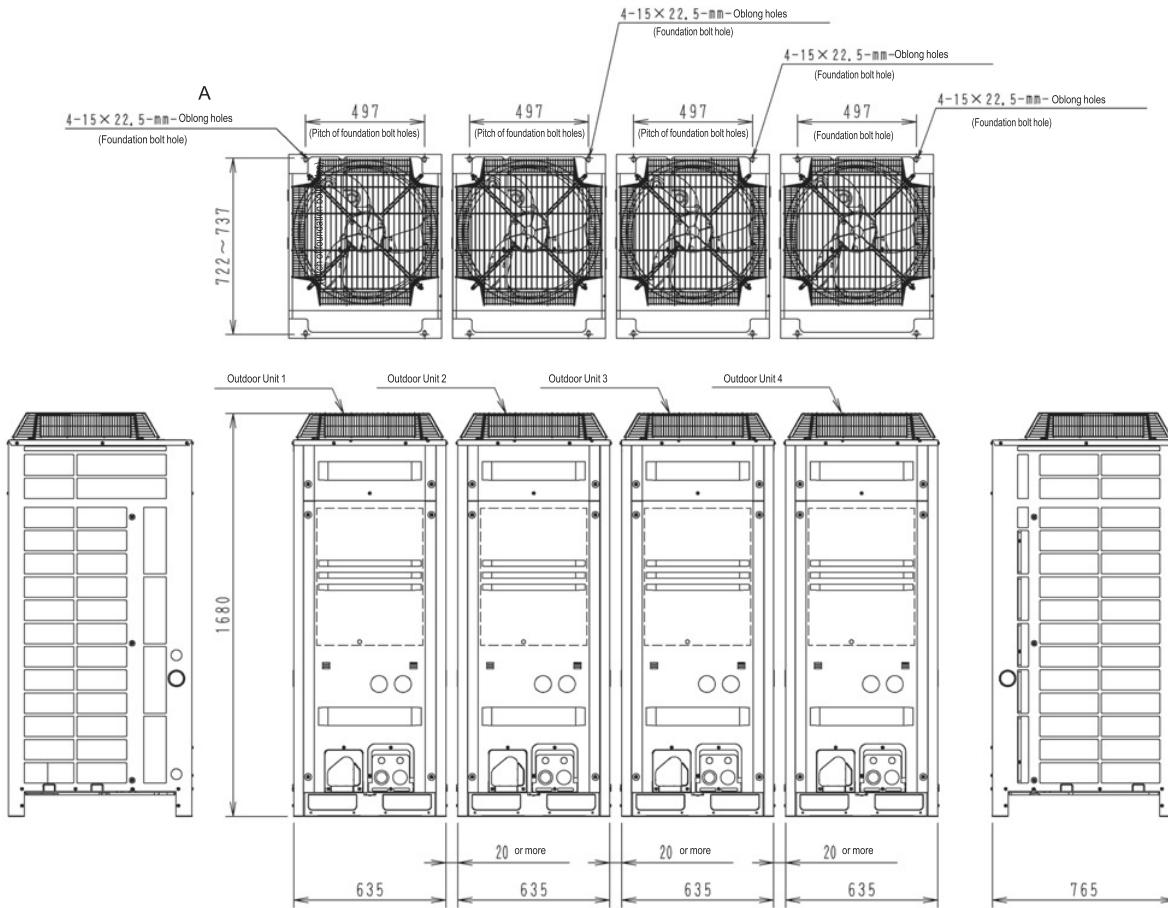

#### SPACE EXAMPLE FOR INSTALLATION

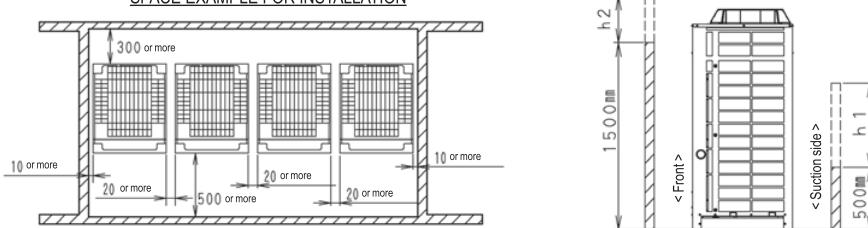

Unit: mm

Model name	Outdoor unit 1	Drawing N°.	Outdoor Unit 2	Drawing N°.	Outdoor unit 3	Drawing N°.	Outdoor unit 4	Drawing N°.
RQCEQ712P3	RQEQQ212P3	3D066441A	RQEQQ180P3	3D0664413	RQEQQ180PA	3D066441A	RQEQQ140P3	3D066441A
RQCEQ744P3	RQEQQ212P3	3D066441A	RQEQQ212P3	3D0664413	RQEQQ180PA	3D066441A	RQEQQ140P3	3D066441A
RQCEQ816P3	RQEQQ212P3	3D066441A	RQEQQ212P3	3D0664413	RQEQQ212PA	3D066441A	RQEQQ180P3	3D066441A
RQCEQ848P3	RQEQQ212P3	3D066441A	RQEQQ212P3	3D0664413	RQEQQ212PA	3D066441A	RQEQQ212P3	3D066441A

#### NOTES

- Heights of walls  
Front: 1500mm  
Suction side: 500mm  
Side: Height unrestricted  
The installation space shown in this figure is based on the condition of cooling operation at the outdoor air temperature of 35°C.  
The installation space of suction side shown above must be expanded in the following case.  
- Design outdoor temperature becomes over 35°C.  
- Operating over Max. operating load  
(In case of causing a heavy heating load at indoor unit side)
- If the above wall heights are exceeded then  $h2/2$  and  $h1/2$  should be added to the front and suction side service spaces respectively as shown in the following figure.
- When installing the units the most appropriate pattern should be selected from those shown above in order to obtain the best fit in the space available always bearing in mind the need to leave enough room for a person to pass between units and wall for the air to circulate freely. (If more units are to be installed than are catered for in the above patterns your layout should take account of the possibility of short circuits.)
- The units should be installed to leave sufficient space at the front for the on site refrigerant piping work to be carried out comfortably.

3D066865A